



EP600 v4 Wireless Subwoofer

IMPORTANT SAFETY INSTRUCTIONS

CAUTION

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
- 12.



Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
16. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
17. The mains plug of the power supply cord shall remain readily operable.
18. Do not expose batteries to excessive heat such as sunshine, fire or the like.



The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING : To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

SAFETY PROCEDURES

- Ensure that you connect your Subwoofer only to the type of power supply indicated on the amplifier faceplate, and ensure that the power cord cannot be walked on or otherwise damaged.
- To prevent electric shock, match wide blade of plug to wide slot, fully insert.
- Ensure that objects or liquids are not allowed to penetrate the enclosure.
- Your AXIOM Subwoofers are finished in a durable vinyl and from time to time should be wiped clean gently with a slightly damp cloth to remove any dust or stains.

For any additional information or service, contact:

**AXIOM, 2885 HWY 60
DWIGHT ON CANADA
P01 1H0**

Phone: **1-888-352-9466**



Every member of our Axiom team is pleased that you have decided to purchase one of our products. We have all worked hard to bring the highest level of satisfaction to your audio experience.

Axiom is deeply committed to ongoing audio research. It began in the early 1980s when I was involved with the world-class psycho-acoustical research that was being conducted at the National Research Council in Ottawa, Canada. Since that time we have built one of the finest acoustical laboratories in the world at our facility in Dwight, Canada where we continue this research allowing Axiom to provide the world's most realistic-sounding loudspeakers.

At Axiom our goal is to provide you with a truly exciting and emotional experience every time you listen to your audio system. We want you to feel part of our Axiom family and as such we stand at the ready to deliver personal, expert advice on any of your audio needs.

Sincerely,

A handwritten signature in blue ink, which appears to read 'I. Colquhoun', is positioned below the word 'Sincerely,'.

Ian Colquhoun
President and Founder
Axiom Audio


Placement

The amount of deep bass you get from your new subwoofer will be quite dependent on proper location in your particular room, the room's dimensions, and the location of your listening area. You can't easily change your room or its dimensions, so it's worthwhile finding the best location that will let your subwoofer deliver its optimum performance---smooth, deep and powerful bass to your seating area. The subwoofer does NOT have to be at the front of the room with your main stereo speakers. Deep bass below 80 Hz is not directional, so it doesn't matter if the subwoofer faces you or is at the side or back of the room. Now get ready to do the tried-and-true "subwoofer crawl." Move your subwoofer as close as you can to where you sit. If it's a chair, move the chair aside and place the sub where the chair was. If it's a couch, slide the couch temporarily out of the way and put the sub about where you usually sit. Play a DVD movie with lots of low-frequency effects or a CD with plenty of deep bass in the music, the kind that really kicks your sub into motion.

Now crawl around the room in the general area where you were thinking of locating the sub or even in areas that you didn't think of. Go several yards in each direction--near the wall, out from the wall, towards a corner, away from the corner, and so on on all four walls--while you listen for smooth and extended bass response. At some locations, the bass may seem really exaggerated and boomy. In other spots, it may almost disappear. Pick a location somewhere between these extremes. That's it!

Mark the spot with some masking tape then move the subwoofer into that position. Now put the furniture back. Test the technique by playing the same deep bass selections, only this time sit in your favorite chair (where the subwoofer was). The deep bass should sound just like it did at the place where the sub now sits.

You see, it works!

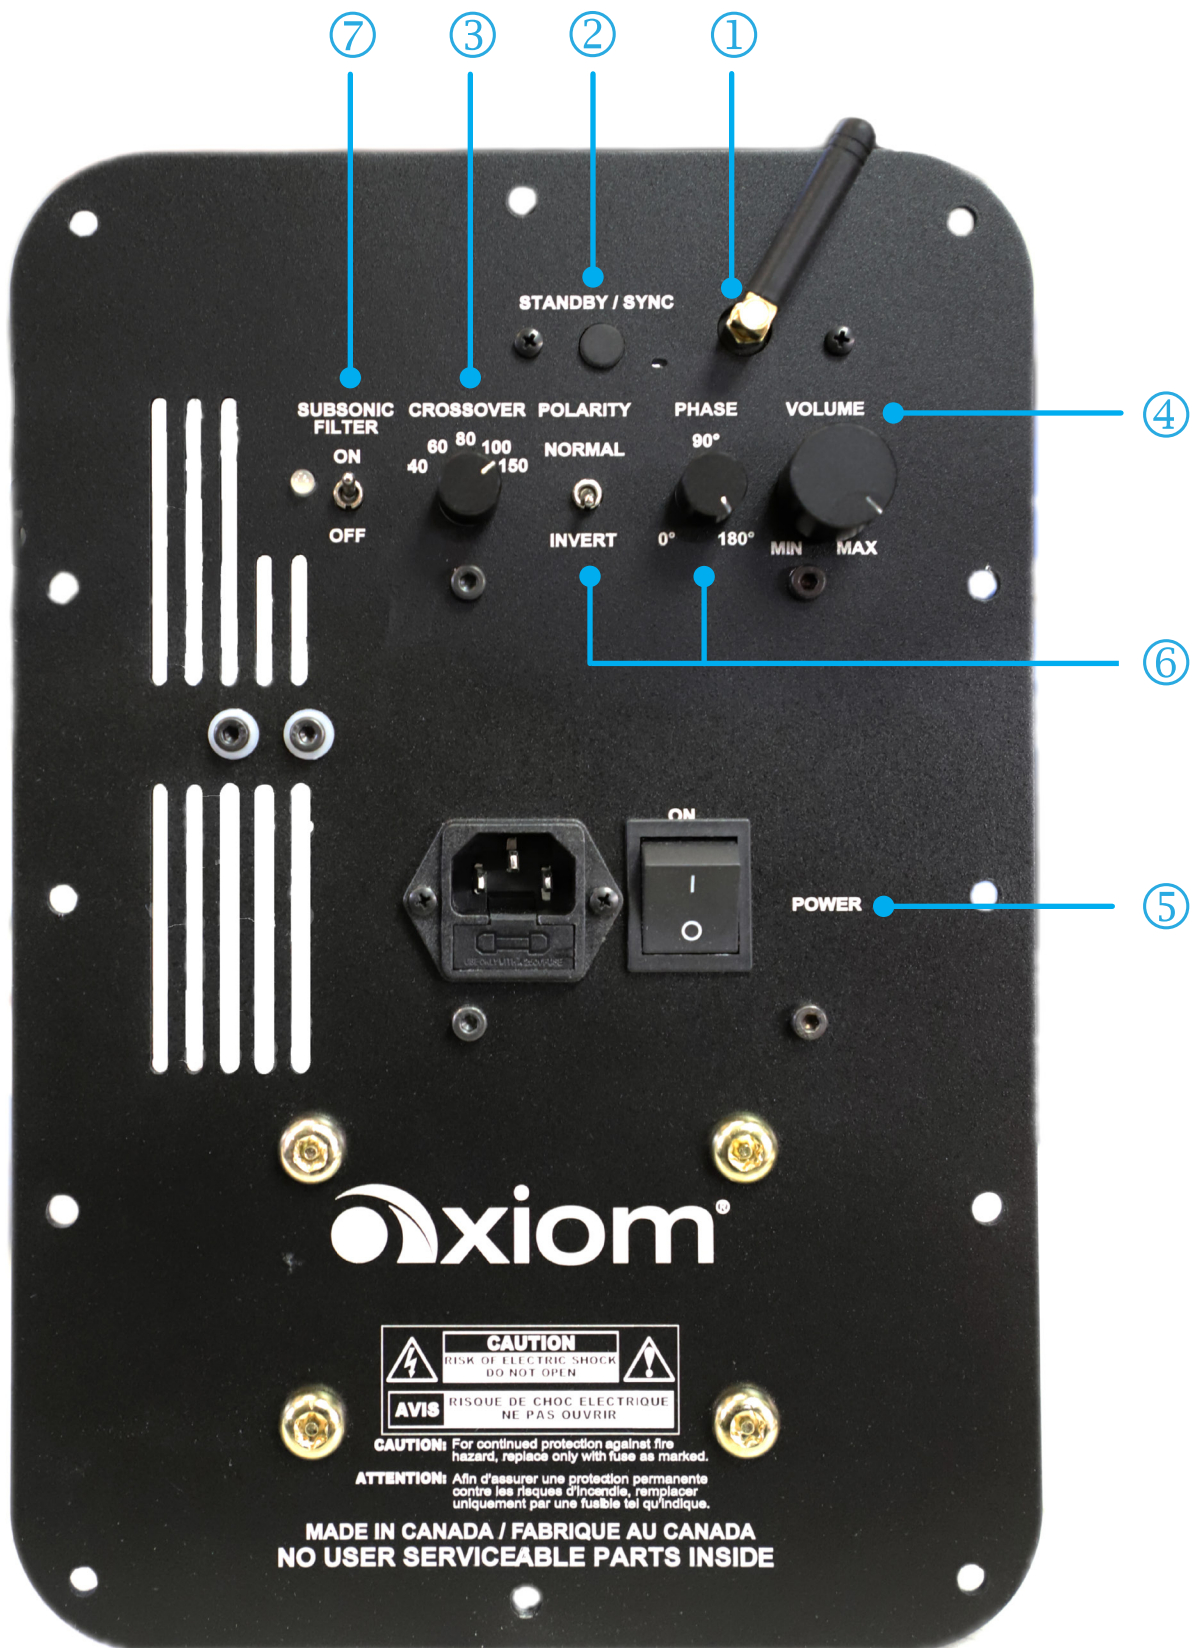

Subwoofer Setup

Step 1a

WIRELESS SETUP:

Standard Transmitter

Transmitter Connections:

Attach one of the included antennas to the back of the transmitter. Use caution to not over-tighten - finger tighten only.

Connect a standard line level source that has a volume control, such as the headphone jack of a smartphone or tablet, the left and right outputs from a pre-amplifier or receiver, etc. to the left and right inputs of the transmitter.

Plug the barrel connector of the supplied power adaptor into the DC input jack on the transmitter. Plug the power adaptor into a nearby wall outlet.

Subwoofer Connections:

Place the subwoofer in your preferred location (See Placement section above). Attach one of the included antennas to the back of the subwoofer.

Use caution to not over-tighten - finger tighten only. Plug the power cable into a nearby wall outlet.

Powering On/Off Transmitter:

Press the white button marked Power/Sync on the back of the transmitter once to turn on. A green indicator light will turn on or flash (see below). Press the button again to turn the transmitter off.

Powering On/Off Subwoofer:

Move the main power switch to the On position. Press the button marked Standby/Sync on the back of the subwoofer once to turn on. A green indicator light will turn on or flash (see below). Press the button again to place the subwoofer in standby mode and move the power switch to the off position, if desired. Note that each speaker will automatically switch to a low power mode approximately 30 seconds after playback stops.

Step 1b

WIRELESS SETUP:

AxiomAir Transmitter

Attach one of the included antennas to the back of the transmitter. Use caution to not over-tighten - finger tighten only.

Step 1b (cont.)

If desired, connect a standard line level source such as the headphone jack of a smartphone or tablet, CD/DVD player, etc. to the Left and Right analog inputs of the transmitter.

If desired, connect a digital optical source such as a TV to the optical input of the transmitter. Set the optical output on your TV to Stereo.

Plug the barrel connector of the supplied power adaptor into the DC Input jack on the transmitter. Plug the power adaptor into a nearby wall outlet.

Subwoofer Connections:

Place the subwoofer in your preferred location (See Placement section above). Attach one of the included antennas to the back of the subwoofer (continued on next page).

Use caution to not over-tighten - finger tighten only. Plug the power cable into a nearby wall outlet.

Powering On/Off Transmitter:

Press the white button marked Power on the front of the transmitter once to turn on. A green indicator light will turn on and the system will perform a start-up sequence that will take approximately 30 seconds. A start-up sound will play when the system is ready. Press the button again to turn the system off.

Powering On/Off Subwoofer:

Move the main power switch to the On position. Press the button marked Standby/Sync on the back of the subwoofer once to turn on. A green indicator light will turn on or flash (see below). Press the button again to place the subwoofer in standby mode and move the power switch to the off position, if desired. Note that each speaker will automatically switch to a low power mode approximately 30 seconds after playback stops.

Step 2

SYNCING: Your wireless subwoofer and transmitter are synced at the factory and both the green Sync LED on the transmitter and on the subwoofer should be solid green. If this is the case, no action is required, your wireless subwoofer is ready to use. If the green Sync LEDs on your transmitter and/or subwoofer are flashing, you will need to sync them.

Step 2 (cont.)

This process only needs to be performed once as all the components will remember each other, even after disconnecting the power.

On the transmitter: Press and hold the white Power/Sync or Sync button until the green light starts flashing rapidly.

On the subwoofer: Press and hold the Standby/Sync button until the green light is solid. Note that the green indicator light on the transmitter will also now be solid.

Your wireless subwoofer is now ready to use!

Recommendations:

The most reliable wireless signal quality will be achieved by placing the transmitter and subwoofer within “sight” of one another. If you notice interruptions in the audio signal, try moving the transmitter to another location.

Step 3

CROSSOVER: If you are using the Bass Management crossover menu settings in your A/V receiver or pre-amp processor turn the subwoofer crossover control to 150 Hz. Since every room and subwoofer location in it will react differently, we suggest you try some other crossover settings as well. You may find that the best sound in your room is achieved using a slightly higher or slightly lower crossover setting to our suggestion above.

Step 4

VOLUME: Set the volume to 1/2 turn of the rotation range. Later, during the set up process, you will likely return to this volume setting to balance the output of the subwoofer to the other speakers. Your receiver may be equipped with an auto-setup feature. These are very convenient but will not always give you the most optimum audio quality in your room. If you have the time we would suggest doing your set-up manually. You can always compare your manual setup to the auto-setup to see which one you prefer. After your initial set-up is complete, whether manual or auto, you may find you want to turn your subwoofer volume up or down.

Step 6

PHASE and POLARITY: This synchronizes the in/out movement of the subwoofer cone driver with the other speakers in your system. Once you have chosen the best location for your subwoofer, try rotating the phase dial in 1/8 turn increments starting at 0 until you reach 180 and then switch to Polarity to 180 and repeat the process to see if one of these settings produces deeper and smoother bass output in your room. Once complete, move the dial back to the position that resulted in the smoothest and deepest bass at several listening locations in the room. If you hear no difference, leave the dial and the polarity switch at the 0 position. Quite often the phase dial and polarity switch makes little difference, but it's dependent on your particular room's dimensions and subwoofer location.

Step 7

SUBSONIC: Setting this switch to “ON” inserts a 20-Hz cut-off filter in the subwoofer's bass response to prevent the subwoofer from reproducing frequencies below 20 Hz, which may include rumble from studio air conditioning, subways or other undesirable artifacts. If you play vinyl discs from a turntable, set this switch to “ON” to prevent the subwoofer from reproducing turntable rumble and low-frequency record-warp anomalies.

Leave this switch set to “OFF” for all other digital recordings and DVD sound tracks that contain ultra-deep bass frequencies you want the subwoofer to accurately reproduce.



Axiom Audio Head Office: 2885 Highway 60
Dwight, ON Canada
POA 1H0

Toll Free (North America): 1-888-352-9466
Worldwide: 1-705-635-2222
Email: info@axiomaudio.com

www.axiomaudio.com